

# **FLIR X6980<sup>™</sup>**

High-Speed MWIR Science-Grade Camera


The FLIR X6980 is an extraordinarily fast, highly sensitive, 640 × 512 resolution midwave IR camera designed for scientists and engineers. It enables users to capture detailed imagery of fast events for accurate thermal analysis, perform custom radiometric measurements, or detect points of failure in composites, solar cells, and electronics. It is also a great tool for thermal mapping of stress in hypervelocity impact testing or other materials research.


# **KEY APPLICATIONS**

**HIGH-SPEED THERMAL IMAGING** MUNITIONS RANGE TESTING TARGET SIGNATURE RADIOMETRY NON-DESTRUCTIVE TESTING STRESS MAPPING




As with the entire line of FLIR X-Series cameras, the X6980 offers advanced recording, triggering, and synchronization capabilities, making it easy to configure and integrate for successful acquisitions in the most demanding applications. This camera features a four-position motorized filter wheel and support for FLIR motorized focus lenses, providing higher guality recordings while saving time and mitigating frustration in dynamic acquisition environments. Plus, by combining a highly sensitive detector with the fastest high-speed frame rates, the X6980 allows researchers to capture and stop motion on the entire high-speed event-whether in the lab or on the test range.

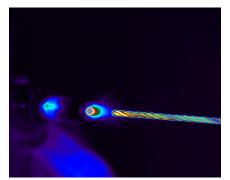

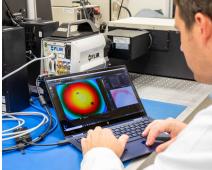



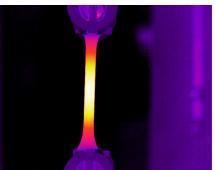

#### HIGH SPEED, HIGH SENSITIVITY

Acquire crisp thermal images, even at high speeds

- Capture full 640 × 512 pixel resolution data at up to 1004 Hz or up to 29,134 Hz in subwindow mode
- Detect minute temperature differences with very low noise
- Ensure crisp images by remotely focusing the camera using FLIR motorized lenses
- Stream high-speed 14-bit data simultaneously over Gigabit Ethernet, Camera Link, and CoaXPress®

#### **ON-CAMERA RAM/SSD RECORDING**

Record critical thermal data directly to on-camera memory

- Save up 26,000 frames of full-resolution data at 1 kHz to on-camera RAM with zero dropped frames •
  - Record up to 15 minutes of 640 × 512 resolution data at 800 Hz directly to the included 512 GB SSD
- Remotely playback and transfer recorded data directly from the SSD over GigE, Camera Link, or CXP
- Rapidly remove sensitive data from the camera with hot-swappable SSD

# SYNCHRONIZATION AND TRIGGERING

Capture essential imagery by synchronizing with external events or instrumentation

- Initialize on-camera data recordings using an external record trigger or specific IRIG-B time
- Control precisely when an image frame is generated or synchronize it to other equipment
  - Align image capture times with other data using TSPI-accurate IRIG-B time stamping

# MULTIPLE SOFTWARE INTERFACES

View, record, analyze and share important thermal data

- Stream thermal data directly to a computer running Windows®, MacOS®, or Linux®
- Make critical decisions quickly using FLIR Research Studio's advanced analysis capabilities
- Integrate camera functionality and recording in third-party software via the FLIR Science Camera SDK
- Collaborate with colleagues by enabling local analysis of shared data with FLIR's free Research Studio Player

#### ADVANCED FILTERING OPTIONS

Maximize camera imagery to meet specific requirements

- Quickly switch between different filters using the easy access, four-position motorized filter wheel
- Easily install/remove spectral or neutral density filters in the field for optimal camera flexibility
- Ensure the correct filters and calibration association with automatic filter recognition
- Optimize the camera system for unique applications with custom cold filter options

#### www.teledyneflir.com

Imagery for illustration purposes only. Equipment described herein is subject to US export regulations and may require a license prior to export. Diversion contrary to US law is prohibited. @2021 Teledyne FLIR LLC. Inc. All rights reserved. 12/2021



#### SPECIFICATIONS

-			
System overview	X6980 MWIR	Optics	
Detector type	FLIR indium antimonide (InSb)	Camera f/Number	f/2.5 or f/4.1
Spectral range	3.0–5.0 μm or 1.5–5.0 μm	Motorized lenses	3.0–5.0 µm: 17 mm, 25 mm, 50 mm, 100 mm, 200 mm
Resolution	640 × 512	Manual lenses	3.0–5.0 µm: 17 mm, 25 mm, 50 mm, 100 mm, 200 mm Broadband (1.0–5.0 µm): 25 mm, 50 mm, 100 mm
Detector pitch	25 μm	Micro/Macro lenses	3.0–5.0 µm: 1x, 3x, 5x, 50 mm close focus f/4.1 only: 1x20 cm long working distance (LWD)
Thermal sensitivity/NETD	20 mK typical		
Operability	>99.95% typical	Lens interface	FLIR FPO-M (4-tab bayonet, motorized)
Sensor cooling	Closed cycle rotary	Focus	Motorized (compatible with manual)
Electronics		Filtering	4-Position warm filter wheel, standard 1-inch filters
Readout type	Snapshot	Image/video presentation	
Readout modes	Asynchronous integrate while read, Asynchronous integrate then read	Palettes	Selectable 8-bit
Synchronization modes	Sync-in, Tri-Level Sync, Sync-out	Automatic gain control	Manual, Linear, Plateau equalization, ROI, DDE
Image time stamp	Internal IRIG-B decoder clock TSPI accurate time stamp	Overlay	Customizable (ability to toggle off)
Trigger modes	Trigger In, Record Start, Header Based	Video Modes	SDI: 720p@50/59.9, 1080p@25/29.97
Minimum integration time	270 ns	Digital Zoom	1x, Auto (best fit)
Pixel clock	355 MHz	General	
Frame rate (full window)	Programmable; 0.0015 Hz to 1004 Hz	Operating temperature range	-20°C to 50°C (-4°F to 122°F)
Subwindow mode	Flexible windowing down to 32 × 4 (steps of 32 columns, 4 rows)	Power	24 VDC (< 50 W steady state)
Dynamic range	14-bit	Weight w/handle, w/o lens	6.35 kg (14 lbs)
On-camera image storage	RAM (volatile): 16 GB RAM included SSD (non-volatile): 512 GB included (compatible with 4 TB)	Size (L × W × H) w/o lens or handle	249 × 157 × 147 mm (9.8 × 6.2 × 5.8 in)
	Data transfer: SSD to Research Studio via data streaming buses	Mounting	2 x ¼ in20, 1 x 3/8 in16, 4 x #10 -24
Radiometric data streaming	Simultaneous Gigabit Ethernet (GigE Vision), Camera Link, CoaXPress® 1.1, dual 5 Gb links		Side: 3x ¼ in20 (each side)
Standard video	HDMI, SDI	-	
Command and control	GigE, USB, RS-232, Camera Link, CXP (GenICam protocol supported over GigE or CXP)	Power swi	tch eSATA SSD
Temperature measurement			
Standard temperature range	-20°C to 350°C (-4°F to 662°F)	Status LEDs	Power Digital Video UVR ImageRecorder

Accuracy \$\lefter 100°C/212°F: ±2°C (±1°C typical)\$\lefter 100°C/212°F: ±2% of reading (±1% typical)\$\lefter 100°C/210°F: ±2% of reading (±1% typical)\$\lefter 100°C/210°C<\lefter 100°C/210°C<

Up to 3,000°C (5,432°F)

Specifications are subject to change without notice. For the most up-to-date specifications, visit www.teledyneflir.com

# For more information, visit: flir.com/X6980

#### www.teledyneflir.com

Imagery for illustration purposes only. Equipment described herein is subject to US export regulations and may require a license prior to export. Diversion contrary to US law is prohibited. @2021 Teledyne FLIR LLC, Inc. All rights reserved. 12/2021

# AMERICAS

Optional temperature range

United States 27700 Southwest Parkway Ave. Wilsonville, OR 97070 Office: +1 877.773.3547

Canada 920 Sheldon Court Burlington, ON L7L 5K6 PH: +1 800.613.0507

Latin America Av. Antonio Bardella, 320 Sorocaba, SP 18085-852 Brasil PH: +55 15 3238 7080

EUROPE

Gigabit Etherne

Camera Link Full

Power in

Belgium Luxemburgstraat 2 2321 Meer Belgium PH: +32 (0) 3665 5100 Hong Kong Rm 1613-16, Tower II Grand Central Plaza 138 Shatin Rural Committee Rd. Shatin, New Territories Hong Kong PH: +852 2792 8955

FLIR

Auxiliary connector Sync in/Sync out Tri-level sync

ASIA

HDM

Record/Start

CoaXPress 1.1

SDI video

Trigger in

IRIG-B input

# Your authorized FLIR distributor:



15540 Rockfield Blvd, Suite C-110 Irvine, CA 92618 Phone: (949) 699-6600 Email: info@movitherm.com https://www.movitherm.com